


Description

Baseboard or skirting board with multiple decorating and functional advantages.
Made of recycled polystyrene. Suitable to be installed over another existing baseboard.

Size: 120 x 20 mm x 2.5 m / 4.7" x 0.8" x 98"



Profile

	<p>h: 120 mm / 4.7"</p>	<p>w: 20 mm / 0.8"</p>	<p>Length: 2.50 m / 98"</p>
---	------------------------------------	-----------------------------------	--

Uses and applications

- This baseboard or skirting board can be directly installed over another preinstalled baseboard without the need to remove it.
- It can be installed in residential and corporate rooms.
- Recommended only for indoor spaces.



Advantages

- Anti-mold and water resistant.
- Anti-scratches.
- Anti-insects and anti-moths.
- 100% eco-friendly.
- Durable color.
- Easy to install.



Eco-friendly



Easy installation



Impermeable



Anti-moth



It does not deteriorate


Installation method

This model is non-compatible with the mounting clip system.


Estimate the amount of profiles according to the room perimeter, with an additional 10% to compensate for cuts. The ceramic or coating on which the profile will be placed must be previously installed.

- Make sure that the walls are clean, dry, aligned, with even surface and plumb.
- Remove the plastic wrap from the baseboards/skirting boards and apply plenty of filling adhesive or neutral silicone to the backside.
- The profile must be installed in the joint between the floor and the coating, covering the 90° angle formed by both of them.
- If you wish to attach several baseboard/skirting board strips, make a 45° cut on each end, so that they can overlap with one another.
- You can use filling adhesive or spackling paste to obtain a premium finish in the joints.
- Wipe off with a damp cloth the excess of glue immediately after installing the profile and let it dry.


INSTALLATION WITH SQUARE MOUNTING CLIPS:

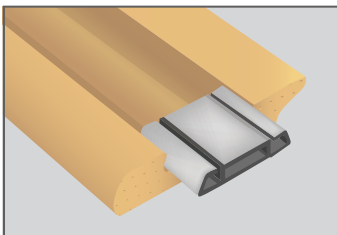


1.
Put the mounting clip on the baseboard/skirting board backside.

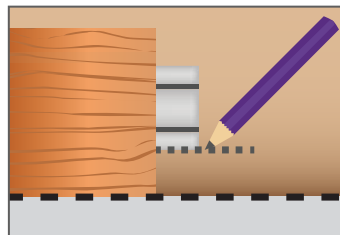


2.
Place the baseboard allowing the mounting clip to protrude from its end and mark the height.

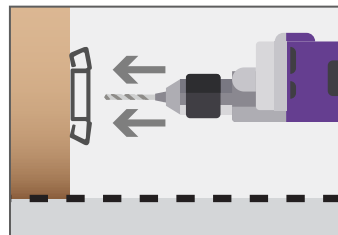


3.
Place the mounting clip and drill a hole in the center until the wall is pierced.

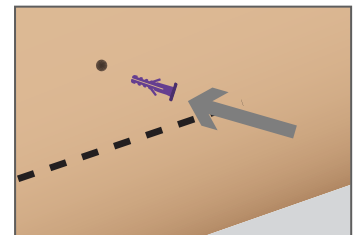


4.
Insert a dowel/spike in the hole.

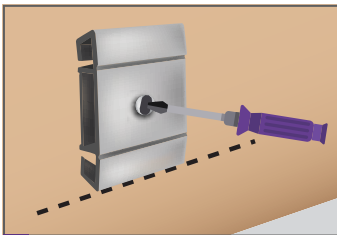

5.
Screw in the mounting clip.

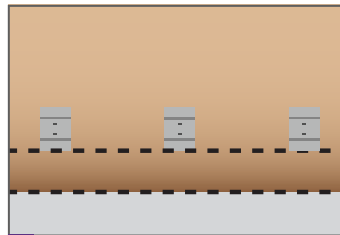

6.
Repeat this sequence every 40 cm/16", leaving a distance of no less than 25 cm/10" from the ends.

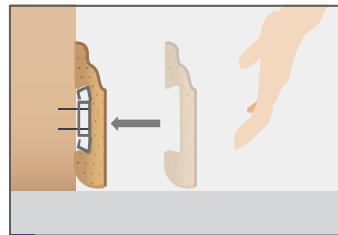

7.
Press the baseboard to the mounting clips until it stays firm.

Cleaning and maintenance

Mix water and alcohol or detergent and wipe off dirt with a damp cloth.

Do not use cleaners with formaldehyde to clean this product.

Avoid contact with chemical products, such as bleach/lye, acid, diluents and solvents.